

SWITCHES



58326-11
Warning Light Switch
Thomas



58326-15
Dome Light Switch
Thomas



58326-16
Drivers Dome Light
Thomas



58326-17
ID Marker Switch
Thomas



58326-18
Strobe Light Switch
Thomas



58326-24
Defroster Fan Switch
Thomas



58326-26
Right Heater Switch
Thomas



58326-29
Fan Switch
Thomas



58326-32
Horn Switch
Thomas

SWITCHES

SWITCHES

 0027324 ROCKER BUTTON, VENT 0027291 SWITCH BASE	 0027305 ROCKER BUTTON, CROSS ARM CANCEL 0027289 SWITCH BASE
 0032198 ROCKER BUTTON, SPEAKER, INT.-EXT 0032480 SWITCH BASE	 0029026 ROCKER BUTTON, RH HEATER 0027291 SWITCH BASE
 0027301 ROCKER BUTTON, W/L SELECT START 0027288 SWITCH BASE	 0027323 ROCKER BUTTON, CHIME 0027287 SWITCH
 0027302 ROCKER BUTTON, W/L EMERGENCY OVERRIDE 0027290 SWITCH BASE	 0027300 ROCKER BUTTON, W/L START 0027295 SWITCH BASE
 0027331 ROCKER BUTTON, AUX. HEATER 0027287 SWITCH BASE	 0027321 ROCKER BUTTON, HEATED MIRROR 0027298 SWITCH BASE 0027297 SWITCH BASE, TIMED
 0029027 ROCKER BUTTON, REAR DOOR 0027294 SWITCH BASE	 0027332 ROCKER BUTTON, STEP DE ICE 0027287 SWITCH BASE
PM8718 BULB FOR ROCKER SWITCHES	

SWITCHES

SWITCHES

 0027312 ROCKER BUTTON, FRONT DOME 0027285 SWITCH BASE	 0027733 ROCKER BUTTON, CLR LIGHTS 0027285 SWITCH BASE
 0027299 ROCKER BUTTON, W/L MASTER GREEN 0027287 SWITCH BASE	 0027307 ROCKER BUTTON, STOP ARM, STROBE, HI, LO 0027285 SWITCH BASE
 0027310 ROCKER BUTTON, LH DOME 0027285 SWITCH BASE	 0027318 ROCKER BUTTON, MASTER HEATER 0027294 SWITCH BASE
 0027306 ROCKER BUTTON, STOP/CROSS ARM CANCEL 0027289 SWITCH BASE	 0027319 ROCKER BUTTON, HEATER PUMP 0027298 SWITCH BASE
 0027581 ROCKER BUTTON, MASTER RED 0027287 SWITCH BASE	 0027325 ROCKER BUTTON, LIFT 0027287 SWITCH BASE
 0027650 ROCKER BUTTON, W/L CANCEL 0027293 SWITCH BASE	 0027328 ROCKER BUTTON, DOOR, ELEC & AIR 0027292 SWITCH BASE 0027296 SWITCH BASE, AIR
CALL US @ 800/581-4735	
PM8718 BULB FOR ROCKER SWITCHES 3	

SWITCHES

SWITCHES



0027309
ROCKER BUTTON,
DOME

0027285
SWITCH BASE



0027327
ROCKER BUTTON,
BRAKE OVERRIDE

0027293
BASE SWITCH



0027316
ROCKER BUTTON,
FRONT HEATER

0027291
SWITCH BASE



0027317
ROCKER BUTTON,
REAR HEATER

0027291
SWITCH BASE



0027314
ROCKER BUTTON,
DRIVERS DOME

0027285
SWITCH BASE



0027330
ROCKER BUTTON,
DRIVER HEATER

0027291
SWITCH BASE



0027329
ROCKER BUTTON,
EXIT DOOR (AIR)

0027296
SWITCH BASE



0027320
ROCKER BUTTON,
STROBE

0027294
SWITCH BASE



0027303
ROCKER BUTTON,
STOP ARM CANCEL

0027289
SWITCH BASE



0027308
ROCKER BUTTON,
CROSS ARM LIGHT

0027285
SWITCH BASE



0027315
ROCKER BUTTON,
FAN

0027291
SWITCH BASE



0027311
ROCKER BUTTON,
RH DOME

0027285
SWITCH

4 **PM8718**
BULB FOR ROCKER SWITCHES

CALL US @ 800/581-4735

SWITCHES

AMTRAN

ROCKER BUTTON #	DESCRIPTION	POSITION	COLOR	SWITCH BASE #
446553001	STOP ARM CANCEL	ON/OFF	BLACK	441142002
446553002	LIFT	ON/OFF	BLACK	441142005
446553003	FLASHER LIGHT	ON/OFF	BLACK	441142002
446553004	MASTER DISCONNECT	ON/OFF	BLACK	441142005
446553005	CAMERA	ON/OFF	BLACK	441142005
446553006	REAR DOME	ON/OFF	BLACK	441142005
446553007	DOME LIGHTS	ON/OFF	BLACK	441142003
446553008	CLEARANCE LIGHTS	ON/OFF	BLACK	441142005
446553009	FOG LIGHT	ON/OFF	BLACK	
446553010	REAR HEATER	LO/HI-OFF	BLACK	441142004
446553011	MIDSHIP HEATER	LO/HI-OFF	BLACK	441142004
446553012	HEATED MIRROR	ON/OFF	BLACK	441142005
446553013	RIGHT FAN	LO/HI/OFF	BLACK	441142004
446553014	CROSSOVER SELECT	AMBER/RED	BLACK	
446553015	CROSSOVER MASTER	ON/OFF	BLACK	
446553016	PASSENGER BUZZER	ON/OFF	BLACK	
446553017	BOOSTER PUMP	ON/OFF	BLACK	441142005
446553018	CROSSING GATE	ON/OFF	BLACK	441142005
446553019	LUGGAGE BOX LIGHTS	ON/OFF	BLACK	
446553020	DESTINATION SIGN	ON/OFF	BLACK	441142005
446553021	DEFOG FAN	LO/HI-OFF	BLACK	441142004
446553022	FLSH MOM CANCEL	ON/OFF	BLACK	441142002
446553023	STROBE LIGHT	ON/OFF	BLACK	441142005
446553024	THROTTLE	ON/OFF	BLACK	441142005
446553025	REAR ROW DOME	ON/OFF	BLACK	
446553026	LAST DOME	ON/OFF	BLACK	
446553027	ALTERNATE ENT DOOR	ON/OFF	BLACK	441142006
446553028	HIGHWAY/CITY	ON/OFF	BLACK	
446553029	ACTIVITY LIGHT	ON/OFF	BLACK	441142005
446553030	DRIVER DOME	ON/OFF	BLACK	441142005
446553031	DRIVER HEATER	LO/HI-OFF	BLACK	441142004
446553032	MASTER FLASHER	ON/OFF	RED	441142005
446553033	HTD WIPER BLADE	ON/OFF	BLACK	441142005

SWITCHES

CALL US @ 800/581-4735

SWITCHES

AMTRAN

SWITCHES	<u>ROCKER BUTTON #</u>	<u>DESCRIPTION</u>	<u>POSITION</u>	<u>COLOR</u>	<u>SWITCH BASE #</u>
	446553034	BTM STEP HEATER	ON/OFF	BLACK	441142003
	443553035	POWER VENT	LO/HI-OFF	BLACK	441142004
	446553036	SET-COAST-RESUME-ACCEL	ON/OFF	BLACK	441142011
	446553075	OVERRIDE	ON/OFF	RED	441142005
	446553038	HEADLIGHTS	PARK/ON-OFF	BLACK	
	446553039	WARNING LIGHTS	AMBER/RED	BLACK	441142011
	446553040	FRONT DOME	ON/OFF	BLACK	441142005
	446553041	LEFT FAN	LO/HI-OFF	BLACK	441142004
	446553042	CRUISE	ON/OFF	BLACK	441142005
	446553043	LUGGAGE LIGHTS	ON/OFF	BLACK	441142005
	446553044	CAMERA	ON/OFF	BLACK	
	446553045	VANDALOCK	UNLOCK/OFF	BLACK	441142014
	446553046	STOP ARM STROBE	LOW-HIGH	BLACK	
	446553047	EMERGENCY WARN LIGHT	ON/OFF	RED	441142003
	446553048	NOISE KILL	ON/OFF	BLACK	441142004
	446553049	THROTTLE	HIGH-LOW	BLACK	
	446553050	THROTTLE	LO/HI-OFF	BLACK	441142009
	446553051	DEFROSTER FAN	LO/HI-OFF	BLACK	441142005
	446553052	RETARD	ON/OFF	BLACK	
	446553053	STEPWELL HEATER	LO/HI-OFF	BLACK	441142004
	446553054	SPEAKER	ON/OFF	BLACK	
	446553055	STEPWELL LIGHT	ON/OFF	BLACK	441142005
	446653056	AIR-HORN	ON/OFF	BLACK	
	446553057	SANDER	ON/OFF	BLACK	
	446553058	PEDESTRIAN LIGHT	ON/OFF	BLACK	
	446553059	STOP ARM HEATER	ON/OFF	BLACK	
	446553060	RIGHT DOME LIGHT	ON/OFF	BLACK	441142005
	446553061	LEFT DOME LIGHTS	ON/OFF	BLACK	441142005
	446553062	ECONOMY MODE	ON/OFF	BLACK	441142003
	446553063	EXHAUST BRAKE	ON/OFF	BLACK	441142001
	446553064	BLANK FOR SPEC. REQ		BLACK	
	446553065	RETARD ON/OFF	ON/OFF	BLACK	441142005
	446553066	RETARD HIGH/LOW	HIGH-LOW	BLACK	441142001

SWITCHES

SWITCHES

 50070 2 TERMINAL, ACCESSORY SWITCH, BLUE BIRD	 50082 3 TERMINAL, HEATER SWITCH BLUE BIRD
 9115 2 TERMINAL, OFF WHEN IN, BLUE BIRD	 9238 2 TERMINAL, ON WHEN IN, BLUE BIRD
 91801-06 2 TERMINAL, DOOR SWITCH	 M-492 2 TERMINAL, ON WHEN IN
 22051379 MOMENTARY DOOR SWITCH	 9118-06 4 TERMINAL, ON WHEN OUT, BLUE BIRD
 9264-02 2 TERMINAL, ON WHEN OUT	 PM4913 4 TERMINAL, HEATER SWITCH
 PM0925 5 TERMINAL, HEATER SWITCH	 9050-01 1 TERMINAL, PUSH-OUT WINDOW
 5007 MICROSWITCH	 8639 MICROSWITCH, ROOF HATCH
 DM1-119 ELECTRIC DOOR SWITCH	 PM0917 HEATER KNOB  PM1531 HEATER KNOB

CALL US @ 800/581-4735

SWITCHES

SWITCHES



TBB136245
WARNING LIGHT SWITCH,
7 TERMINAL (RED)



TBB104539
3 POSITION SWITCH,
AIR SERVICE DOOR,
7 TERMINAL



52006605
PASSENGER HEATER
SWITCH, 8 TERMINAL,
GRAY ROCKER



437261001
3 TERMINAL,
ON/OFF, LIGHTED



437260001
6 TERMINAL,
HI/LOW/OFF



093108700
ON-OFF MOMENTARY,
2 TERMINAL



400070000
4 TERMINAL,
HIGH/LOW/OFF



87133-01
SWITCH BLANK



52005578
AIR DOOR CONTROL
SWITCH



TBB138874
VANDALOCK SWITCH FOR
EMERGENCY DOOR (REAR)

SWITCHES



2209522C1

MOMENTARY PUSH BUTTON
SWITCH FOR BUS SCAN
SYSTEM



4083361C1

MOMENTARY PUSH BUTTON
SWITCH FOR CHILD CHECK
SYSTEM



52000659

EMERGENCY DOOR
SWITCH, FITS THOMAS



SW-1 SWITCH
W/HARNESS

SW-1H SWITCH
W/O HARNESS



SW-3 SWITCH
W/HARNESS

SW-3H SWITCH
W/O HARNESS

TURN SIGNAL SWITCHES



91250

SIGNAL STAT, SELF CANCELING
SIGNAL SWITCH




SIG960Y101

TRUCK-LITE,
TURN SIGNAL SWITCH



A06-22743-002

FREIGHTLINER TURN SIGNAL
SWITCH WITH DIMMER AND
HAZARD

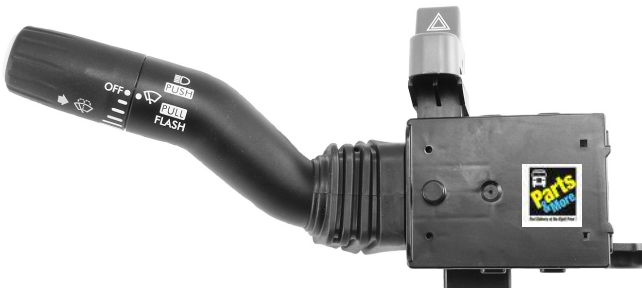

A06-36956-003

THOMAS C-2 TURN SIGNAL
SWITCH WITH WIPER CONTROL

TURN
SIGNAL
SWITCHES



PM5151
BLUE BIRD VISION
TURN SIGNAL SWITCH
BLUE BIRD #0065151



PM6549
BLUE BIRD TURN
SIGNAL SWITCH
BLUE BIRD #10006549